
 


## NetShelter<sup>®</sup> Pass-Through Partition—Installation Instructions

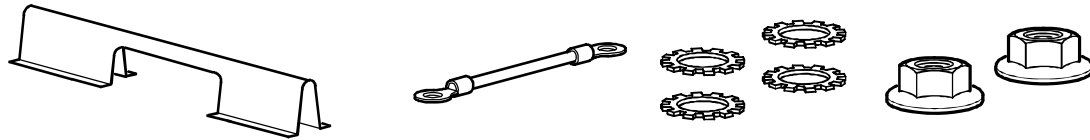


Pass-through Data Cable Partition (AR8163ABLK) for the NetShelter 600-mm Wide Enclosure  
Pass-through Data Cable Partition (AR8188BLK) for the NetShelter 700-mm Wide Enclosure  
Pass-through Data Cable Partition (AR8173BLK) for the NetShelter 750-mm Wide Enclosure  
Pass-through Data Cable Partition (AR8183BLK) for the InfraStruxure 750-mm Wide Power Distribution Unit




For additional information, see the product page on the APC Web site, [www.apc.com](http://www.apc.com).

1

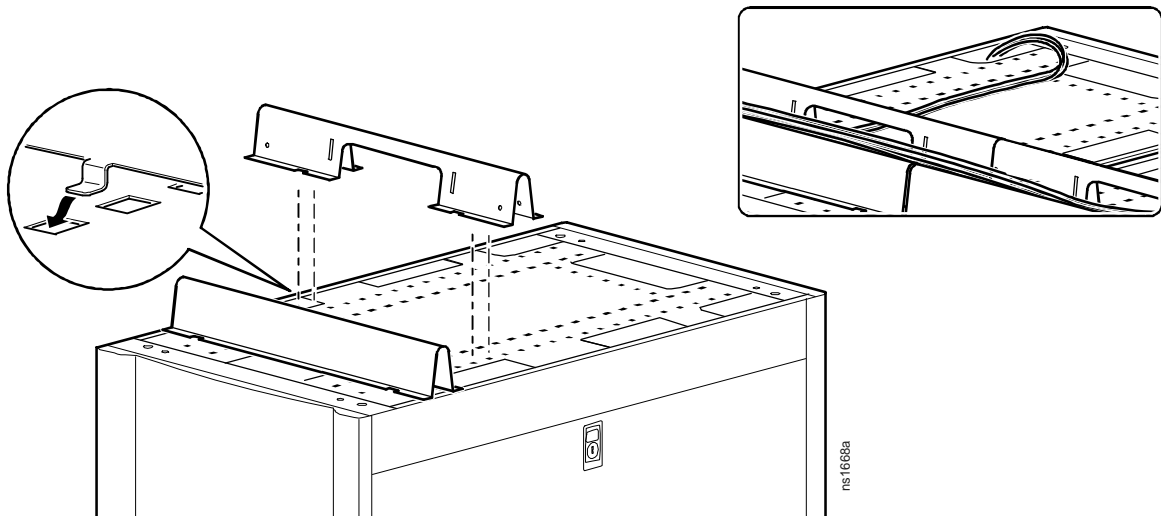

2

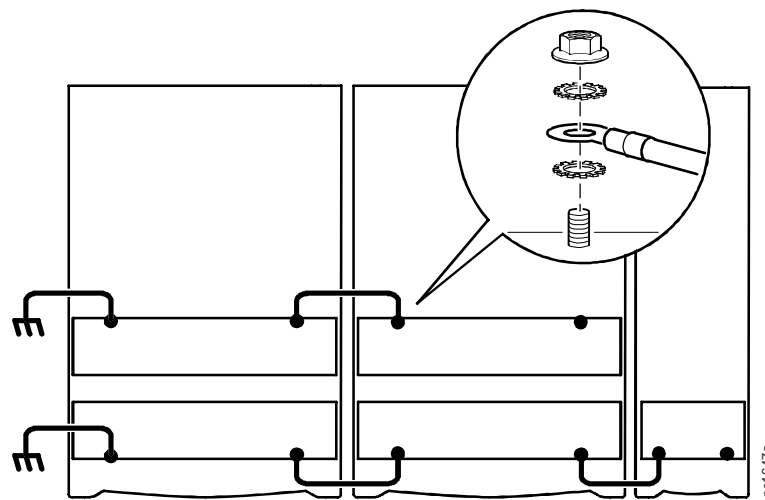

Customer support and warranty information is available at the APC Web site, [www.apc.com](http://www.apc.com).

© 2010 American Power Conversion. All rights reserved. All APC trademarks are property of American Power Conversion. Other trademarks are property of their respective owners.

990-3844A-001  
4/2010