



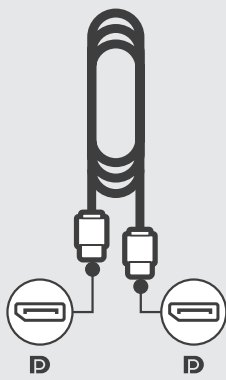
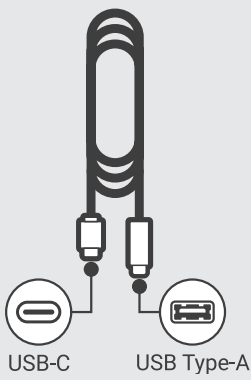
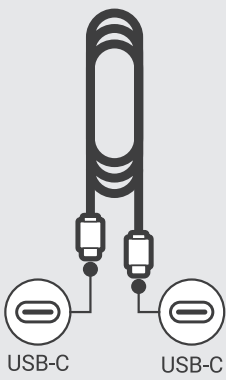
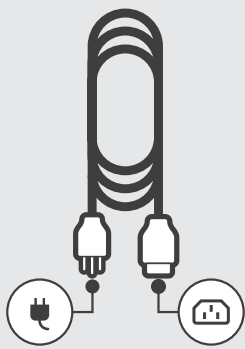


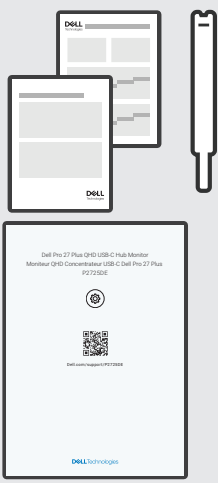



Dell Pro 27 Plus QHD USB-C Hub Monitor  
P2725DE

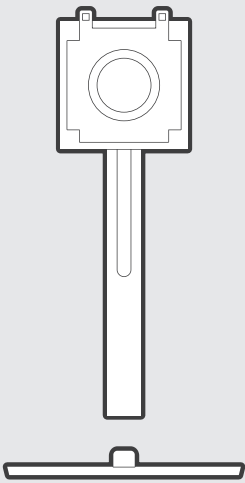


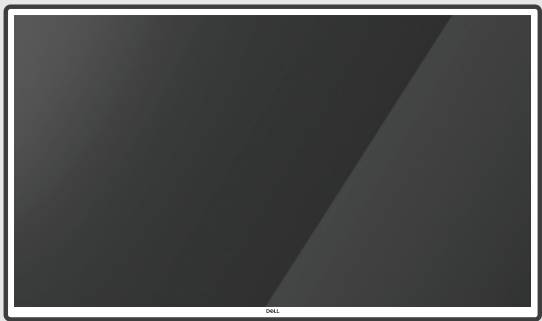


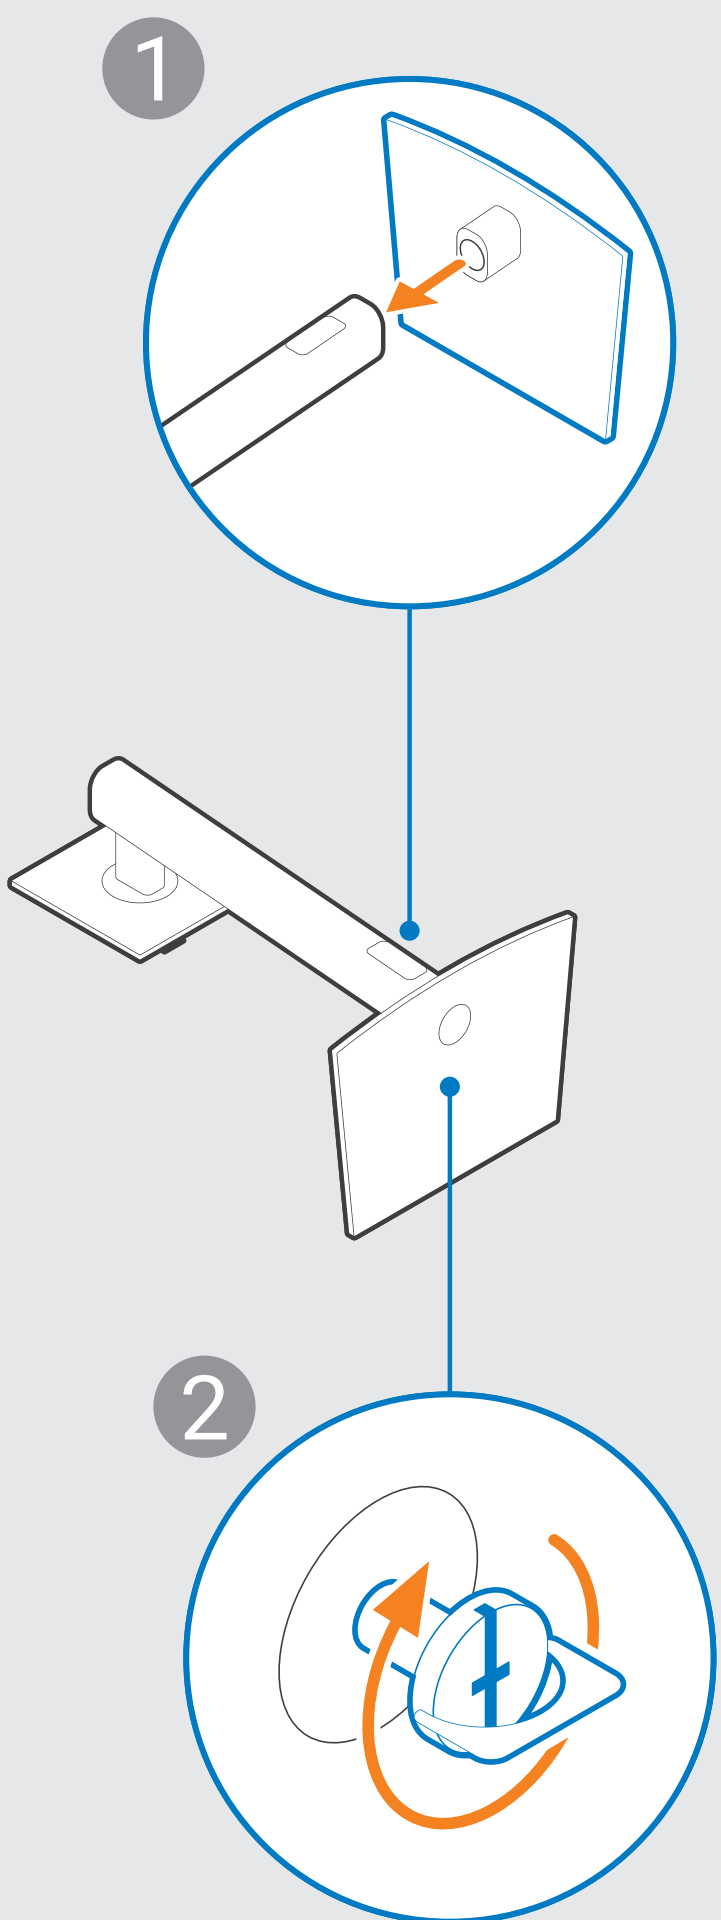


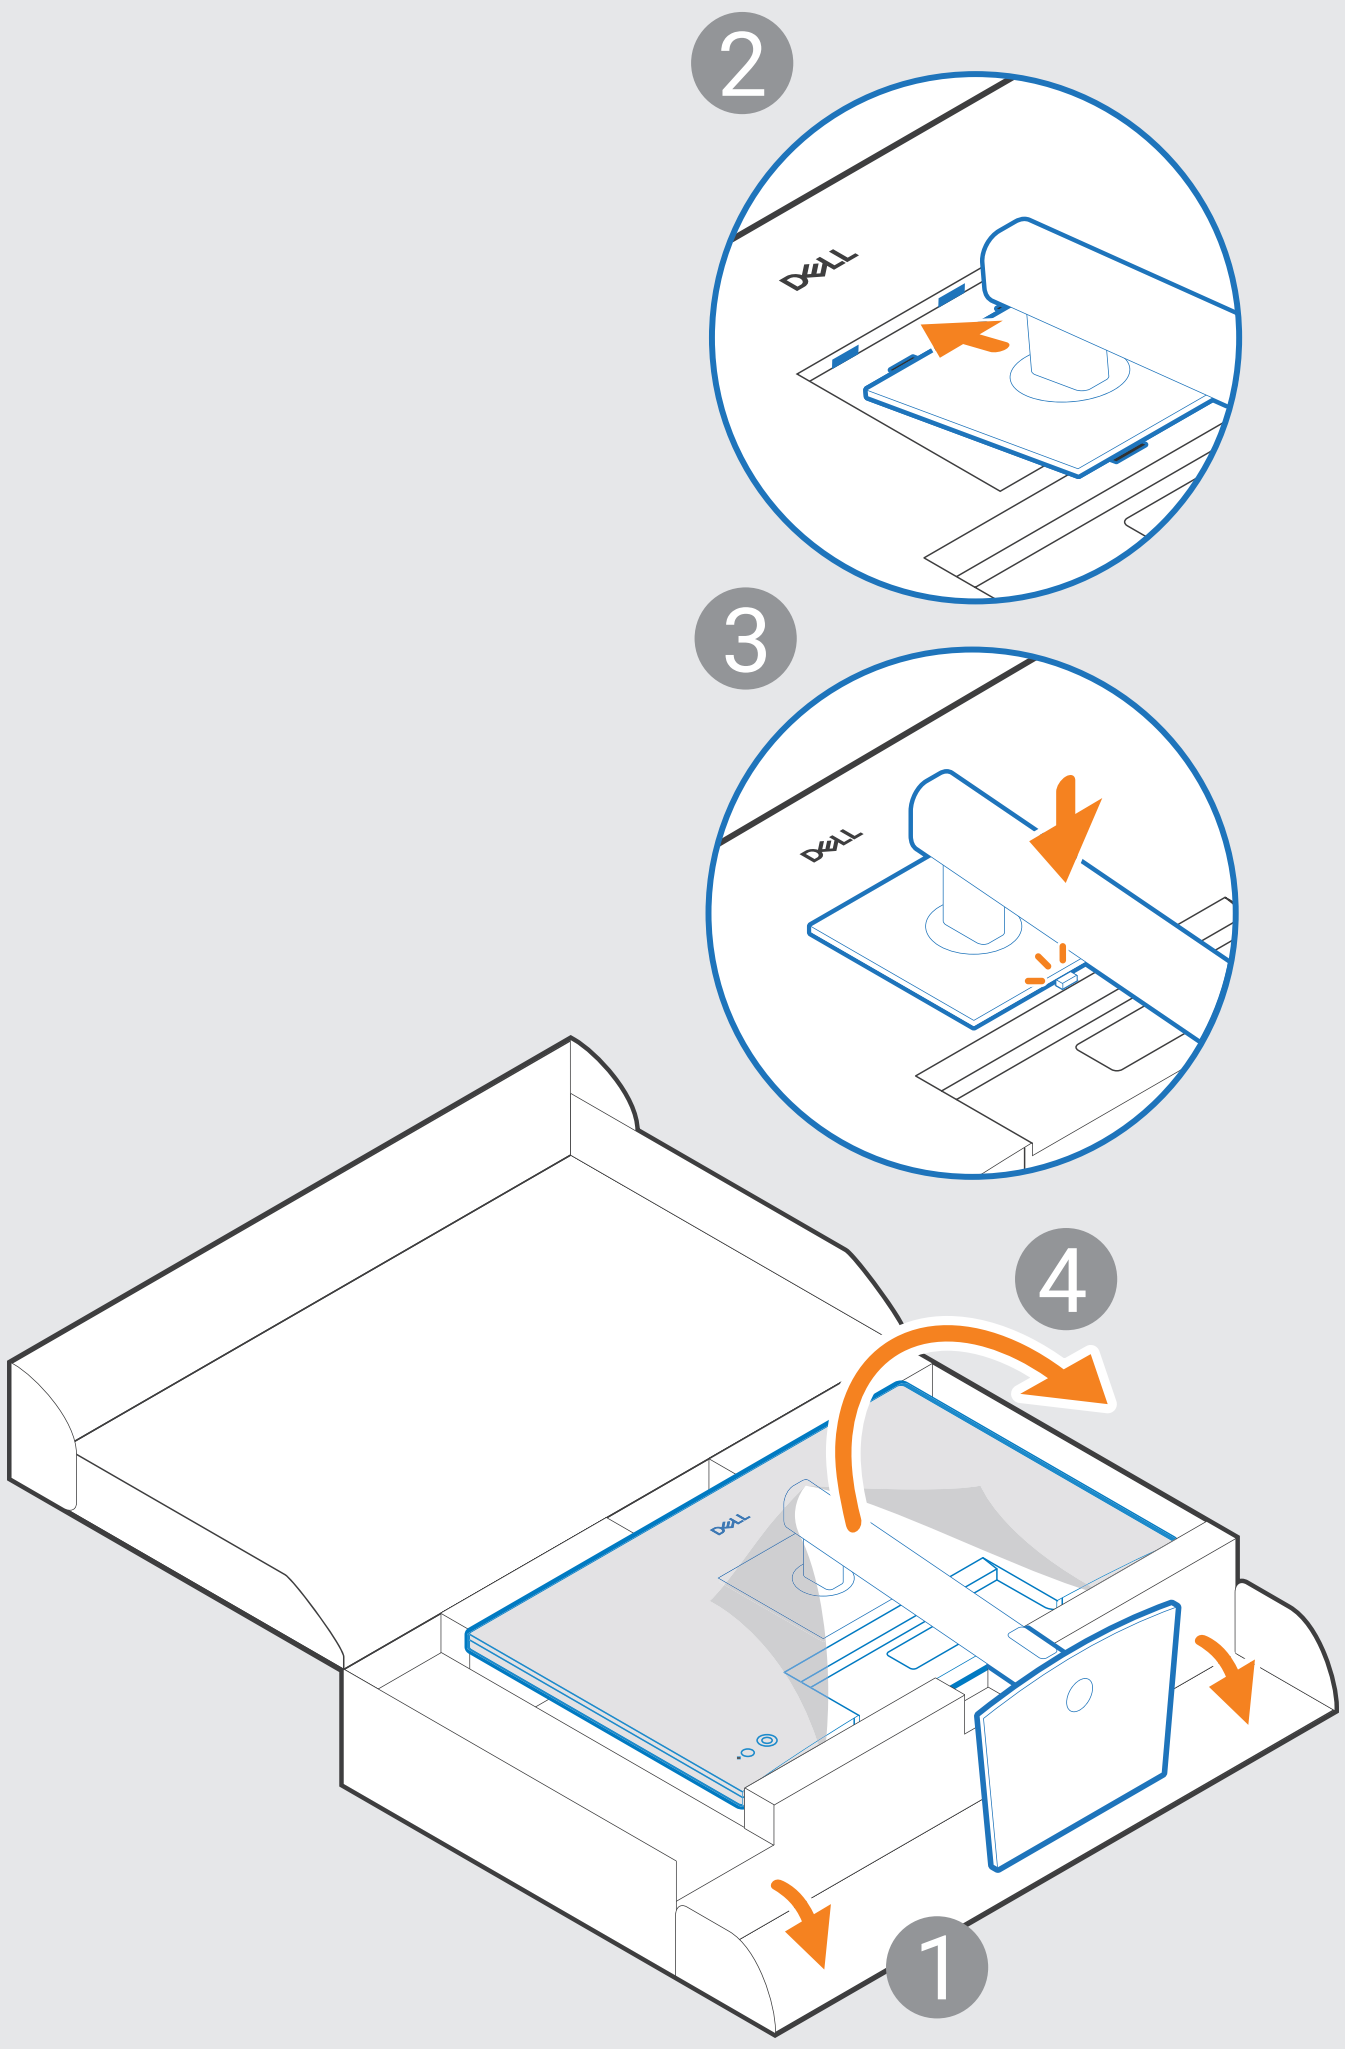

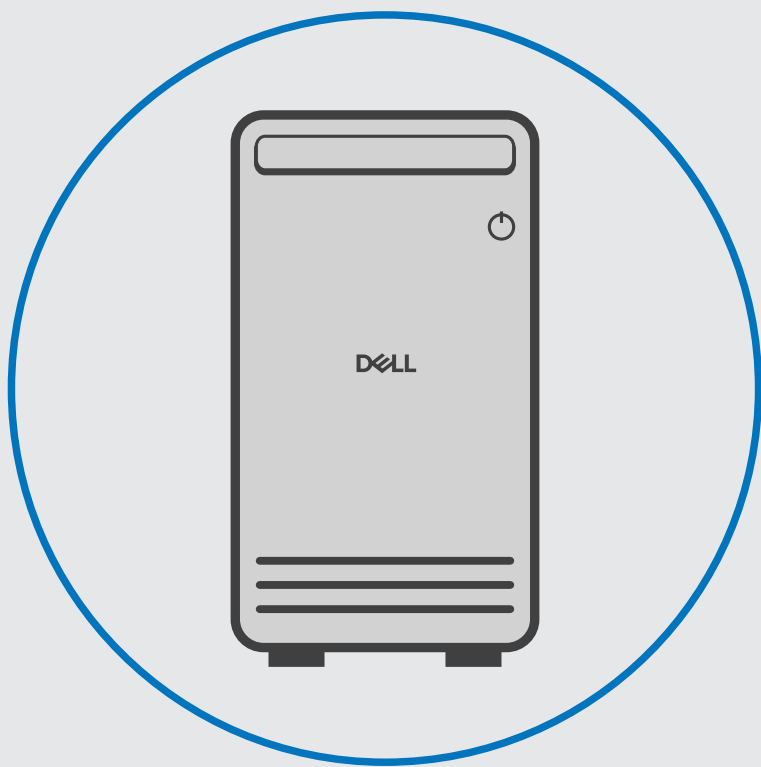


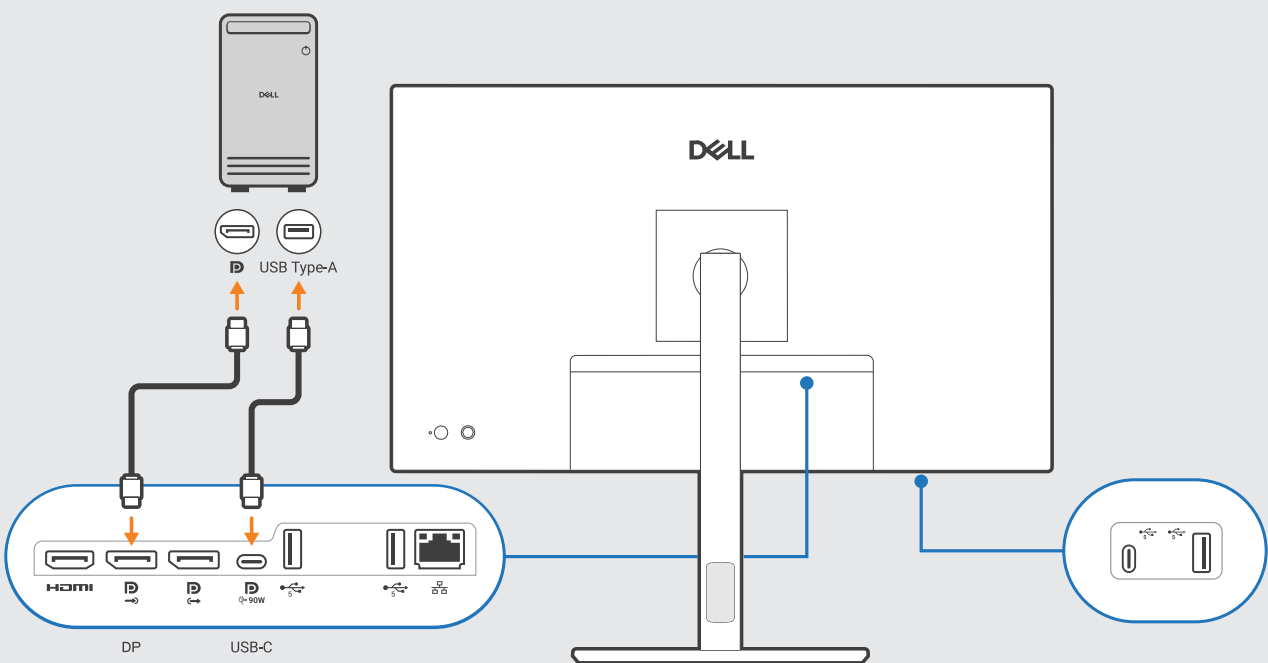


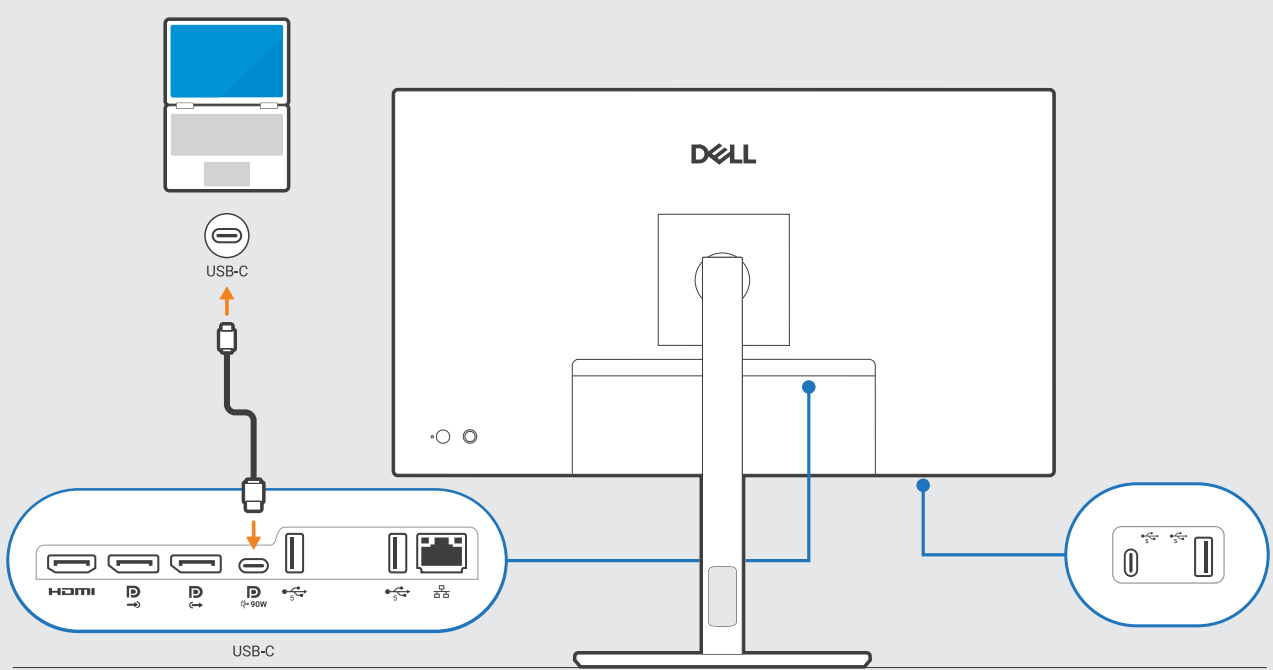

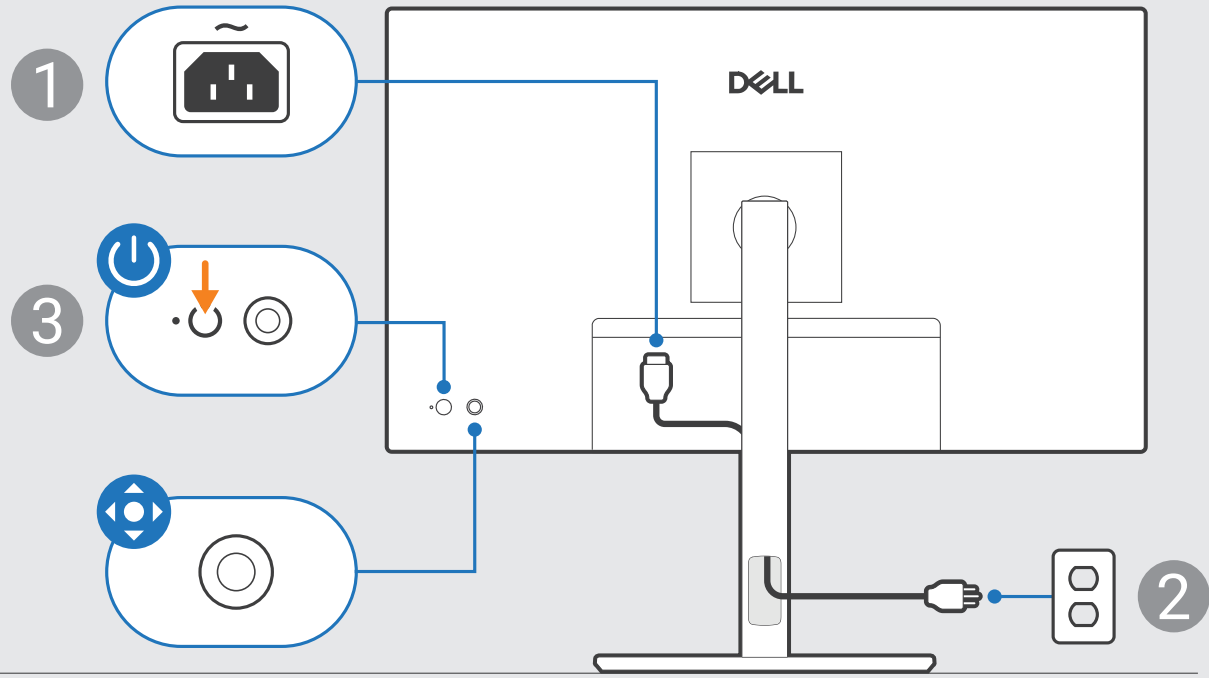




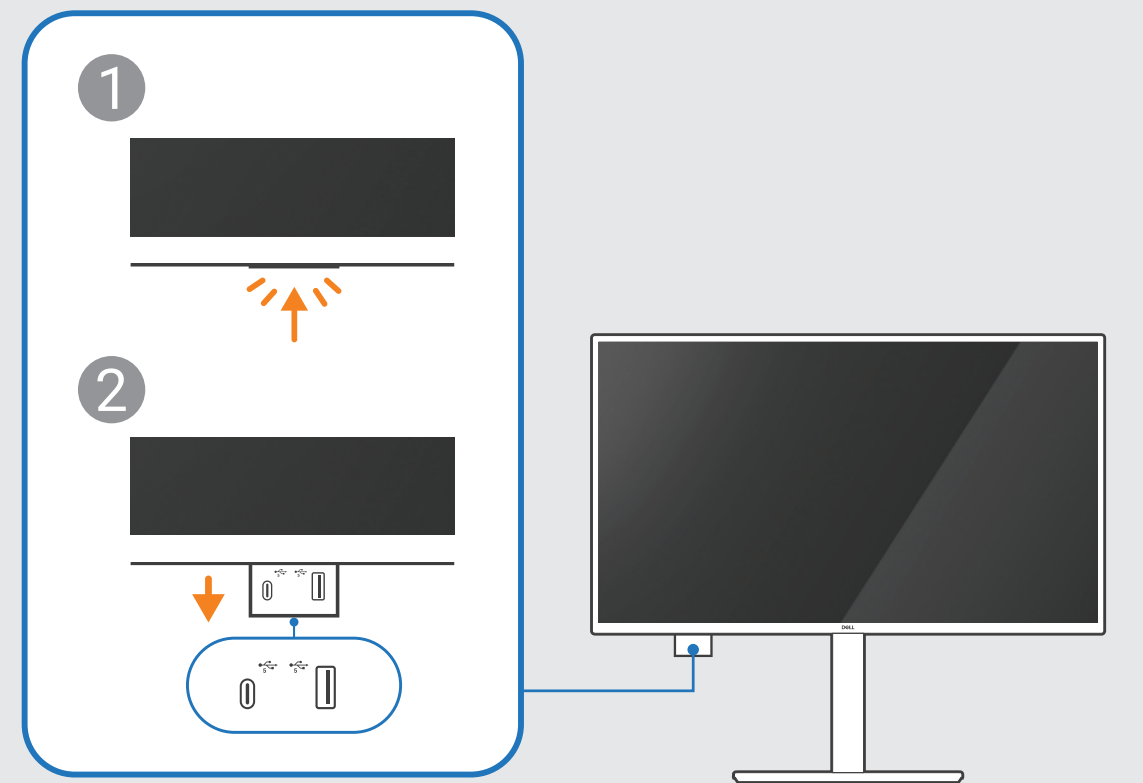


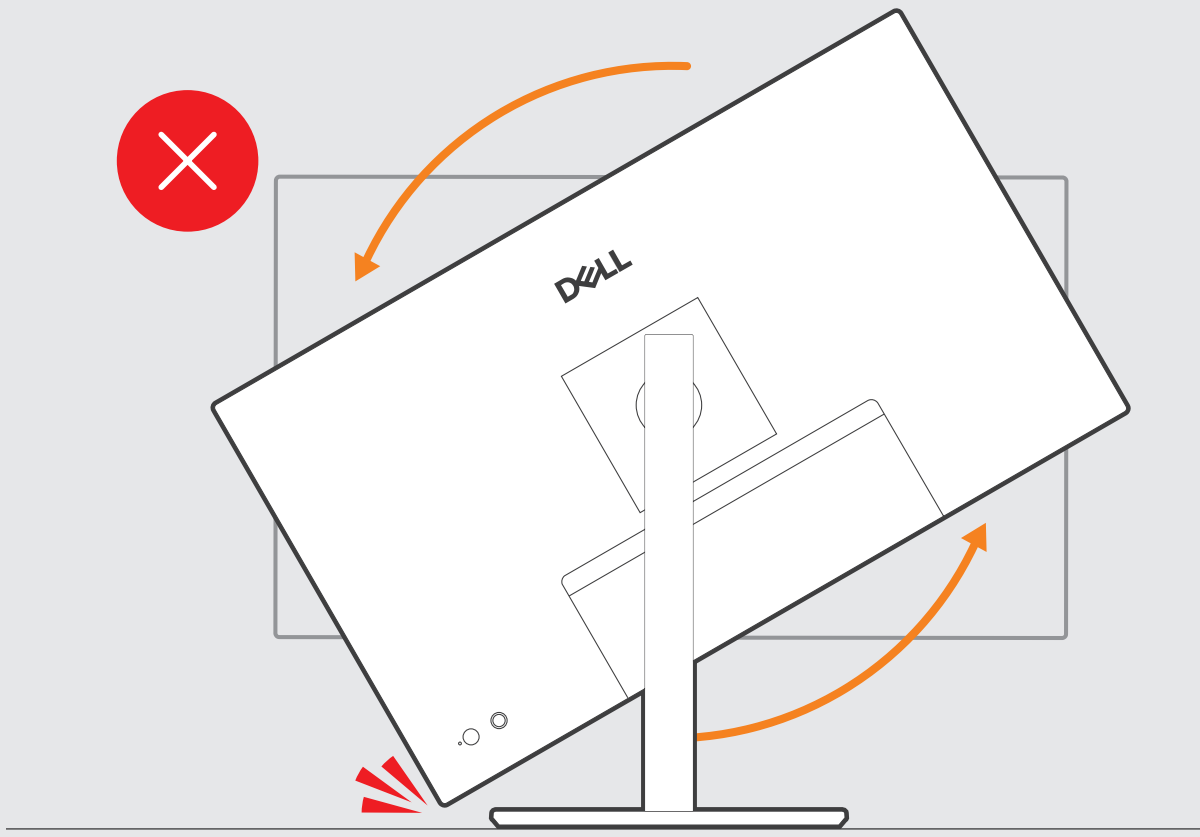


1



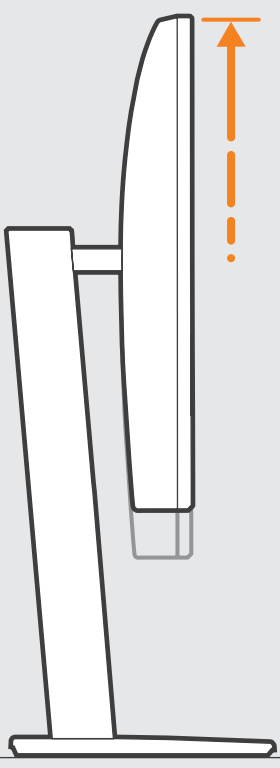



2

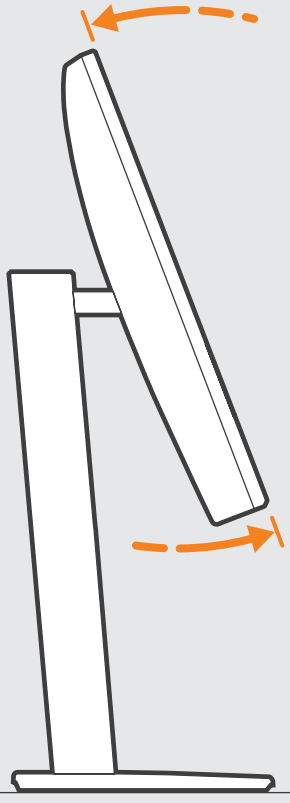


3

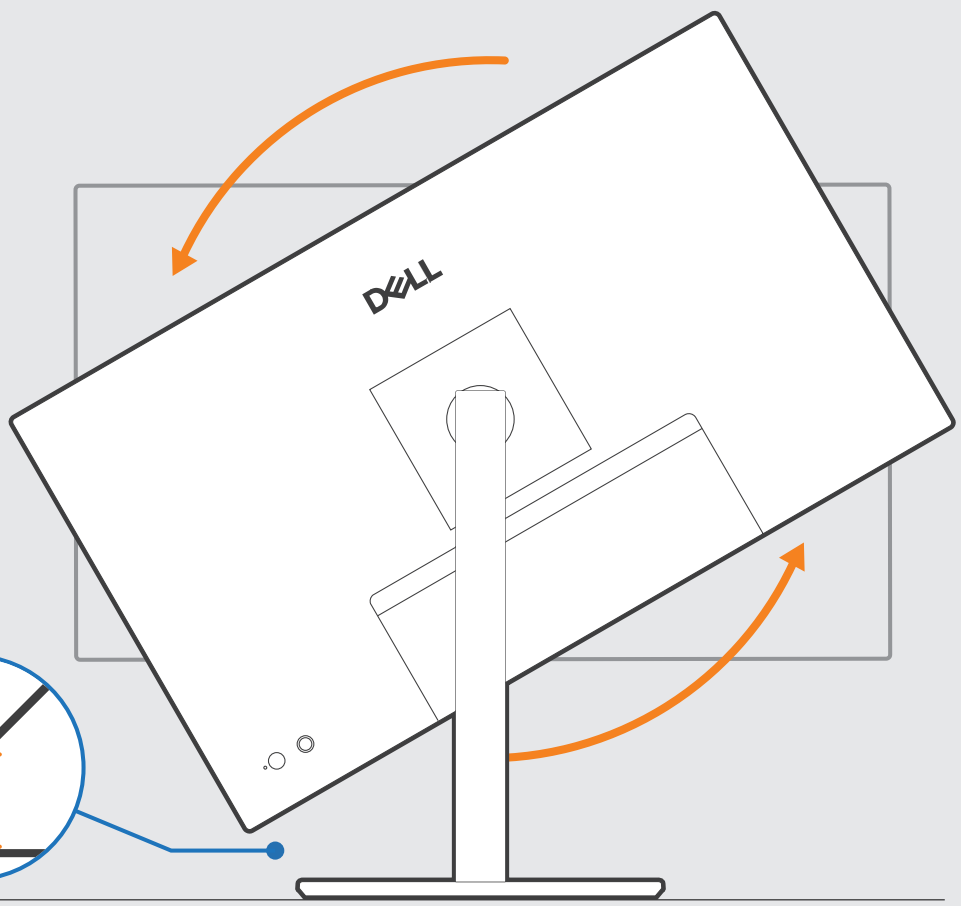

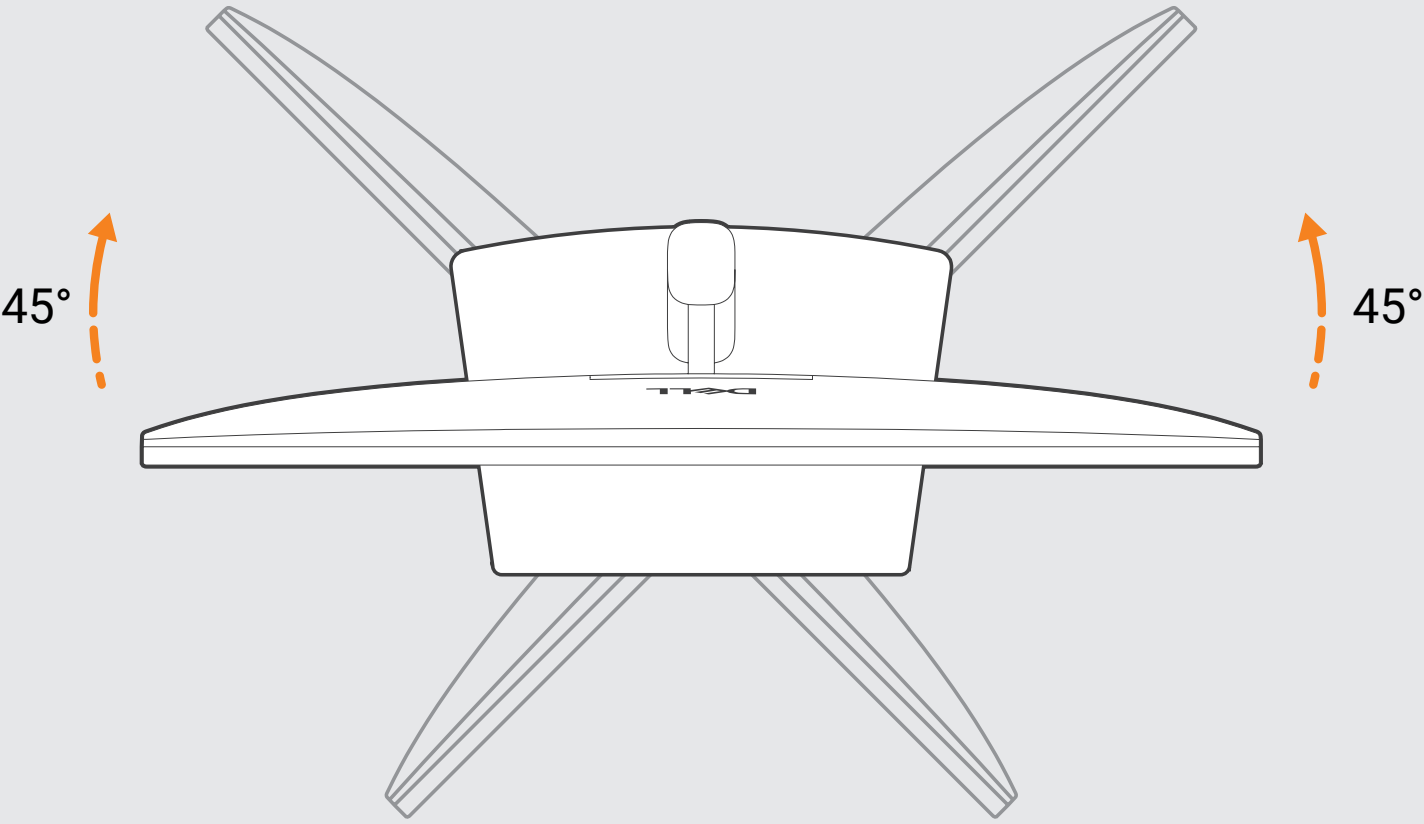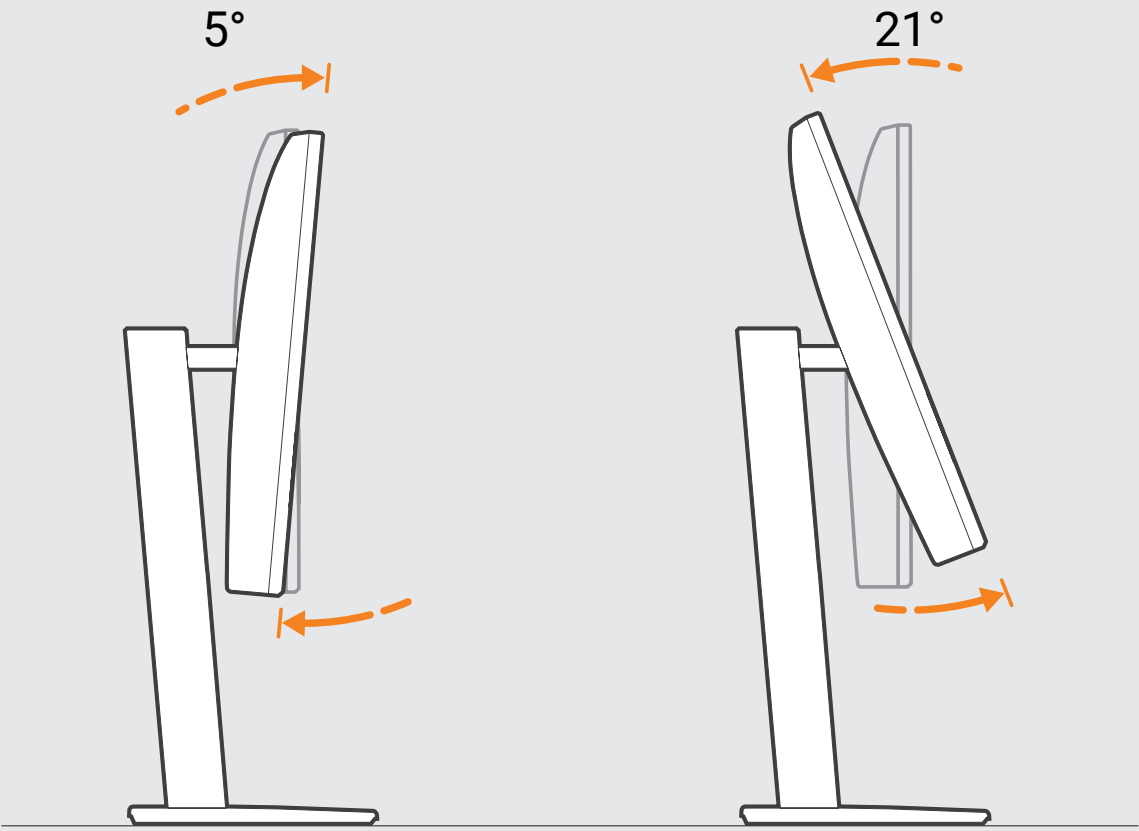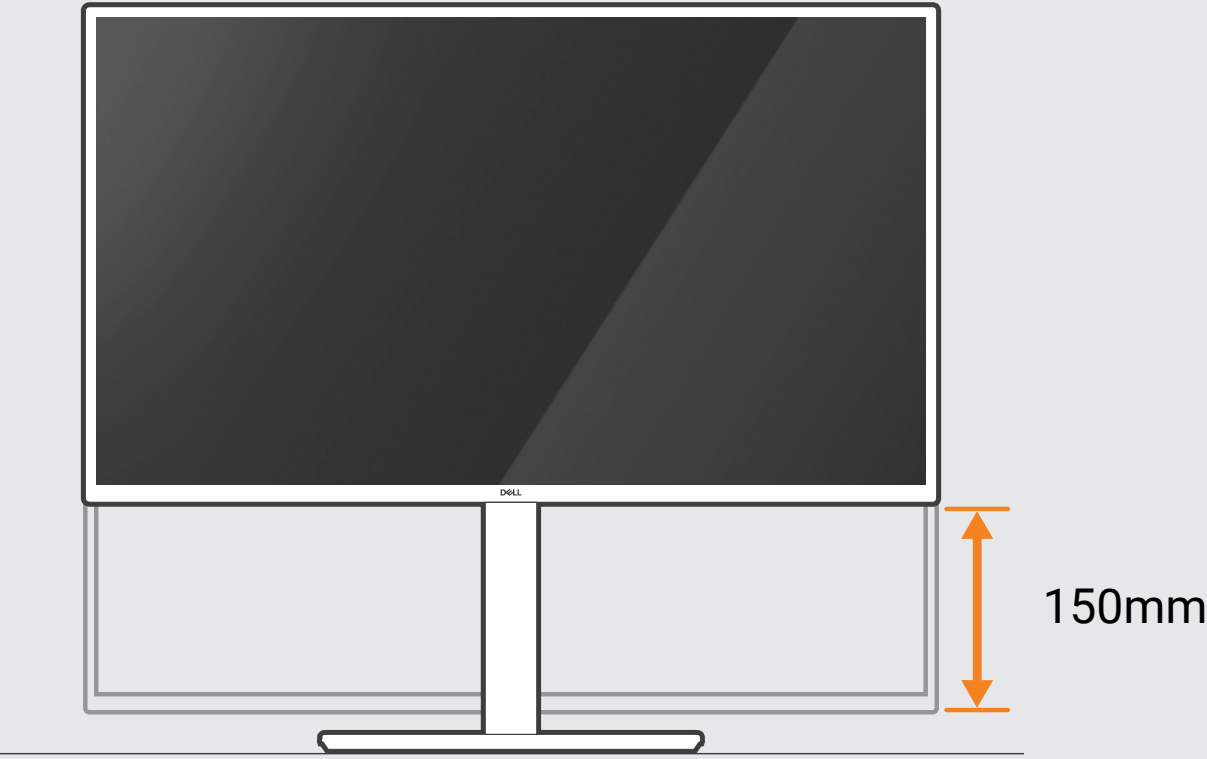


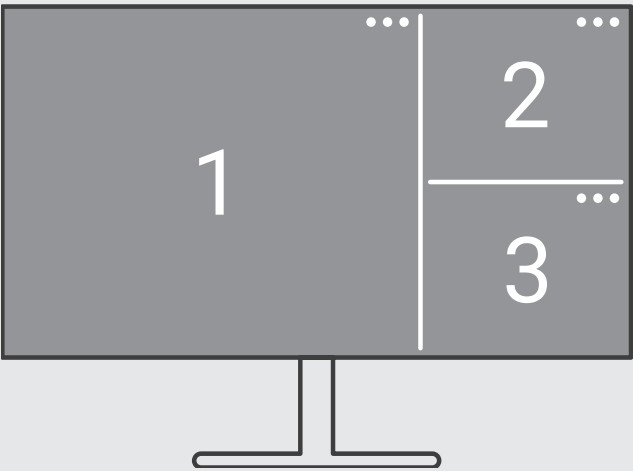

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

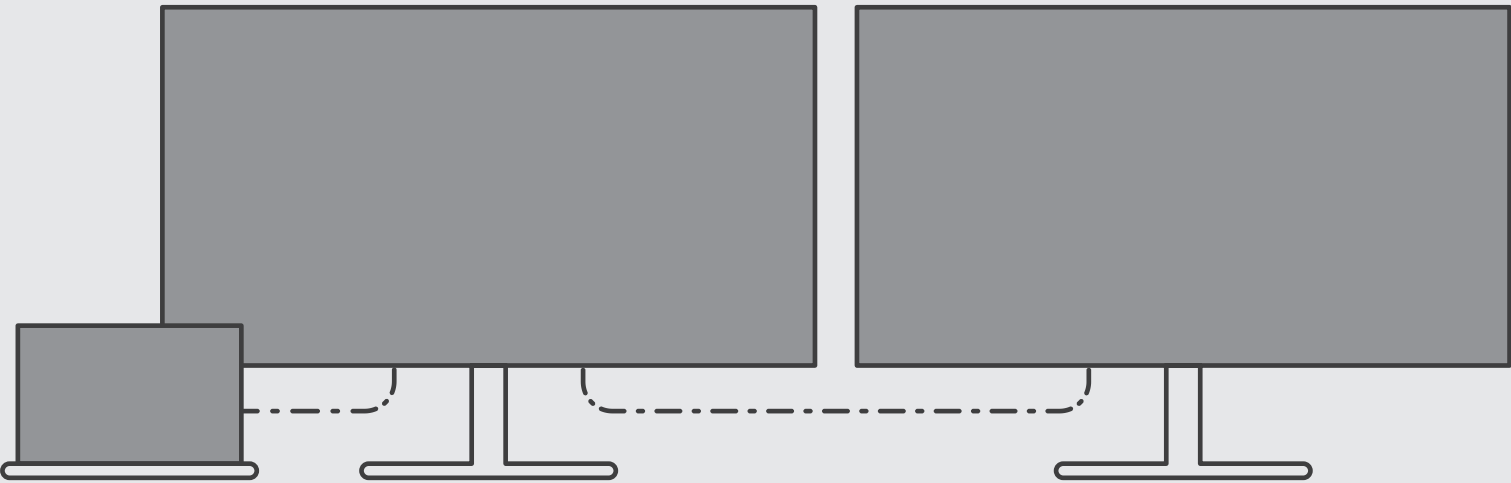

Daisy Chain

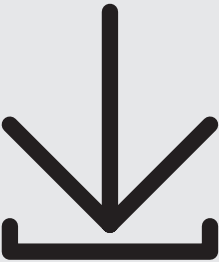

[Dell.com/support/P2725DE](https://Dell.com/support/P2725DE)